

# ADORN<sup>®</sup> Mailbox (using Pillar Stone)

## INSTALLATION INSTRUCTIONS

### TOOLS NEEDED FOR INSTALLATION:


- Safety glasses
- Gloves
- Level
- Fasteners
- Measuring Tape
- Caulking gun
- Construction Adhesive
- Circular or Chop Saw with a diamond blade

### Installing the Mailbox

Construct the mailbox-enclosure using 2"x2"s and OSB or plywood 4' high. The outside dimensions need to be 14"x 14". At approximately 3' high install a shelf for the mailbox to sit on. Cut the appropriate sized opening on one side to accommodate the mailbox.

Cover the frame with an ice and water resistant type of wrap. It is recommended to use treated lumber (2"x4") on the base.


Anchor the mailbox-enclosure as needed.

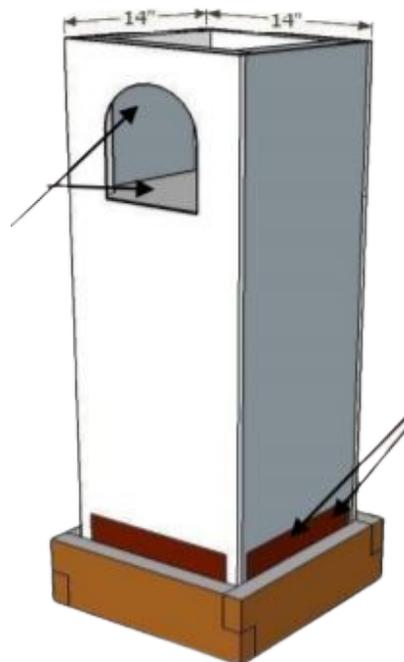

Attach the base course:

Place 4 Pillar Stones around the base as shown. Level the base course and attach with 2 screws per Pillar Stone through the flashing approximately 1" above the stone veneer. Continue installing the Pillar Stones one course at a time. Square up the corners, check for level and attach with screws.

# MAILBOX INSTALLATION INSTRUCTIONS

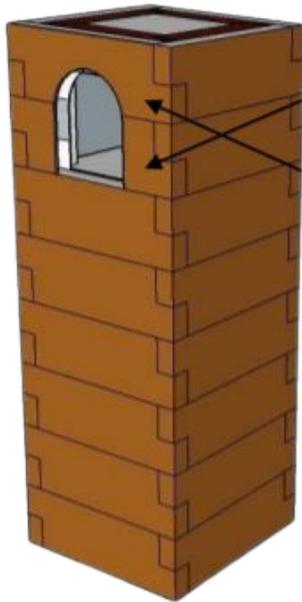


Cut 1 Pillar Stone to the desired lengths, screw and glue in place with construction adhesive.

Set the top Pillar Stone in place, trace the arc on the back of the stone and cut to fit the opening.

When you get to the top course, bend the flashing over the frame and screw in place.

Place a bead of construction adhesive around the top of the Pillar Stones. Set the Pillar Cap in place.

Install mailbox.

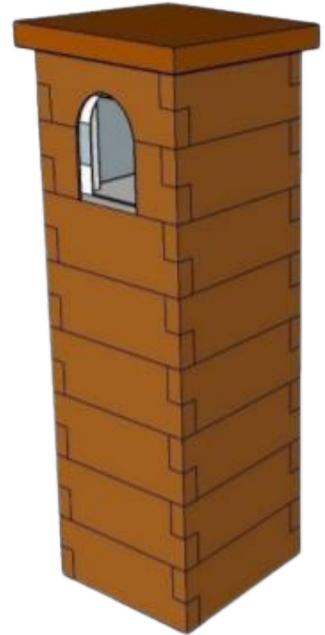

## IMPORTANT INFORMATION

- Ensure that Adorn is being installed to a structure that meets all building code requirements. Code approved flashing must be used at all terminations, penetrations, and material transitions. Control moisture penetration caused by run off, gutters, and downspouts. If there is any question as to the integrity of the structure, contact the appropriate professional to correct. Adorn should maintain a 2" clearance from hard surfaces such as pavement and patio surfaces.
- When cutting, grinding, or trimming any Adorn pieces, always follow the tool manufacturer's safety instructions and use the appropriate safety protection.
- Cutting dust and general construction dust can be removed with clean water and if needed, a nylon bristle brush. Do not clean with a power washer, harsh chemicals, or acid products.
- The small side of the corner occasionally may not fit as snug as desired. If needed, a dab of construction adhesive can be applied to the back of the piece to ensure a snug fit.
- The corners are manually checked to fit together and are packaged as a set. There are 4 sets placed in the box together and the remaining 2 sets have the 5.5" pieces at one end of the box with the 2 9.5" pieces lying flat on the top. When installing corners, use the sets as they are shipped.

Adorn / Rust-Oleum coordinating colors to touch up the base color:

Colorado Gray - #249279 Primer Gray  
Northern Gray - #249279 Primer Gray  
Buckskin - #7226 Bronze

Desert Tan - #7772 Putty  
Terra - #249857 Satin London Gray